



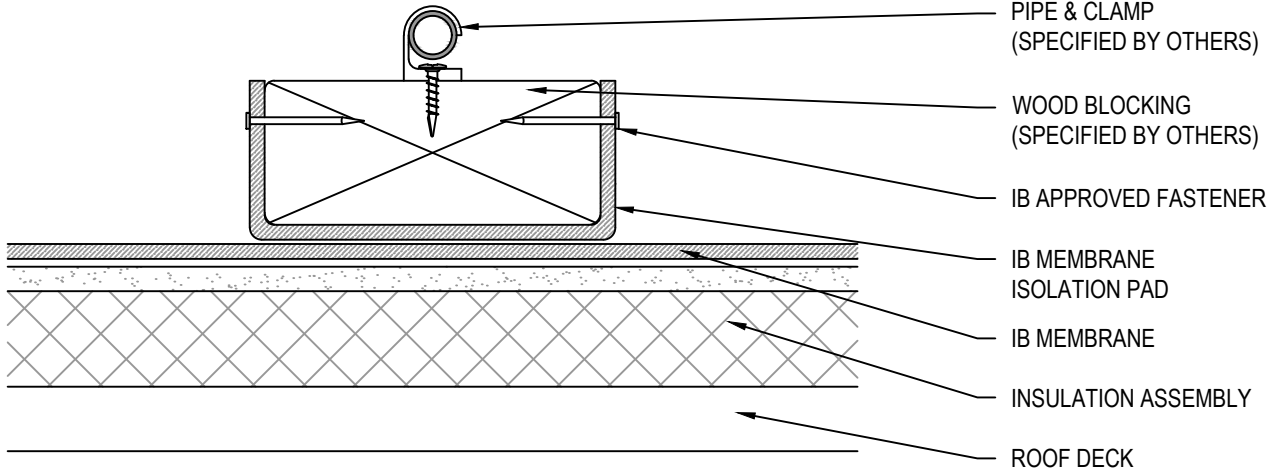

PIPEGUARD

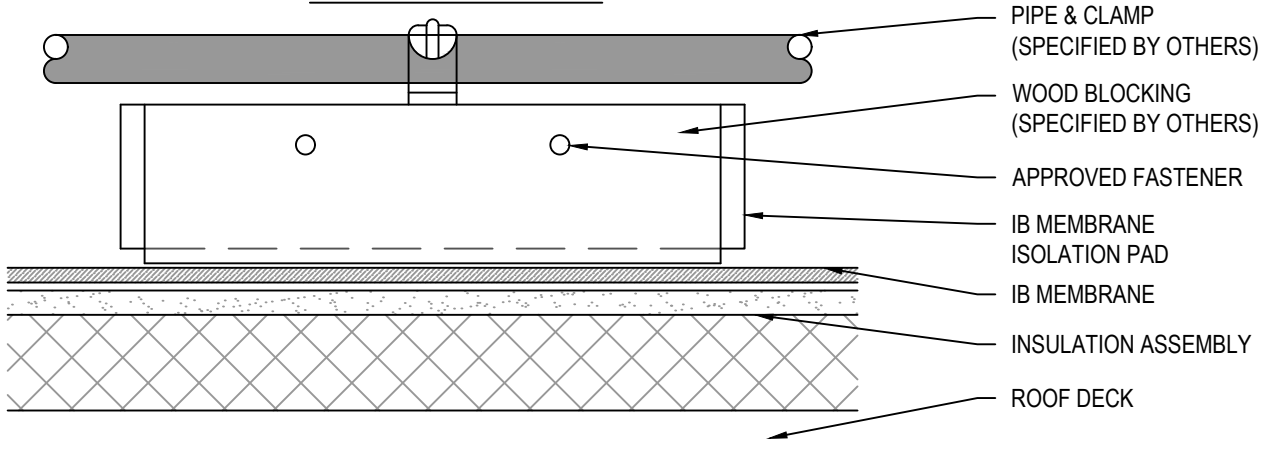

WOOD BLOCKING SIDE VIEW



NOTES:

1. ANY OBJECTS BEING PLACED ON TOP OF THE IB MEMBRANE NEED AN ISOLATION PAD.
2. INSTALL PIPE SUPPORTS / CLAMPS TO ALLOW FOR PIPE EXPANSION AND MOVEMENT.

Scale: NTS	Detail Name: Isolation Pad	Detail Number: PS - 14
Submitted By: Address: Telephone:		Project: Address: